



Heckey

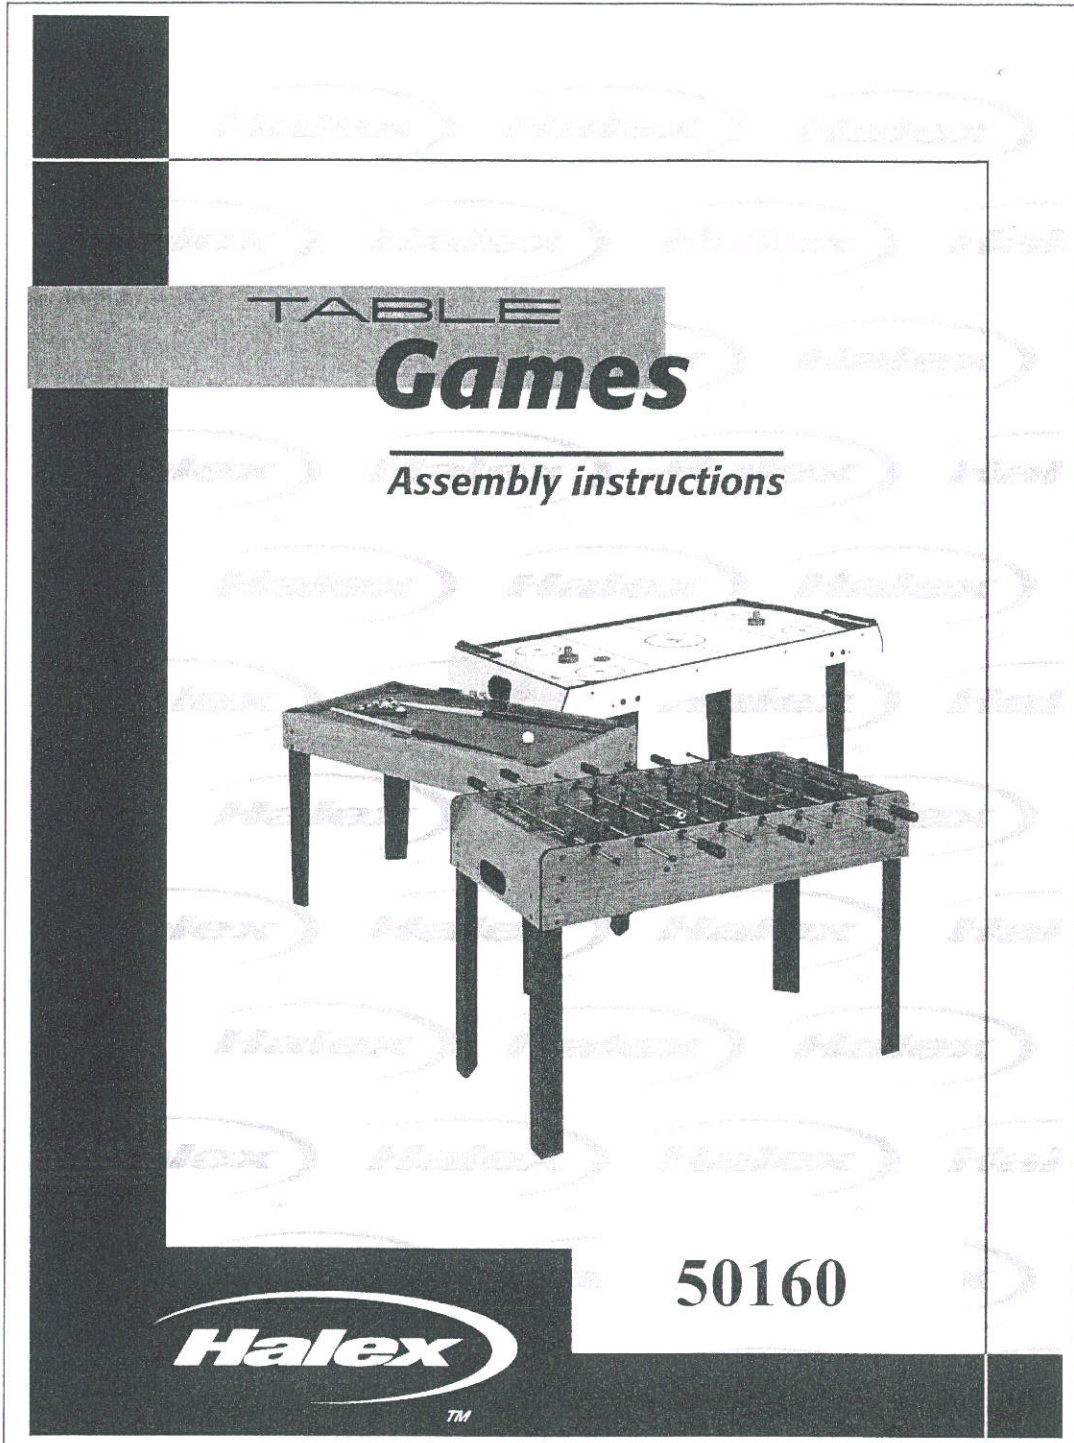

CAUTION:
ELECTRIC TOY.

Not recommended for children under 6 years of age.
As with all electric products, precautions should be observed during handling and use to prevent electric shock.

INPUT: 120VAC-60Hz-22W

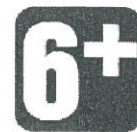

Do not mix old and new batteries. Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.



CARE AND USE OF YOUR TABLE

WARNING: To reduce the risk of fire, electric shock or injury to persons, use this unit only in the manner intended by the manufacturer. If you have any question, contact the manufacturer. Before servicing or cleaning the unit, switch the power off and unplug the adapter from the wall outlet.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.

1. Use spray furniture polish to clean all exterior surfaces of your game table.
2. Use only a suitable 120v AC household outlet.
3. This product is intended for INDOOR use only.
4. DO NOT sit, climb or lean on the table.
5. DO NOT drag the table when moving it. This will damage the leg.
6. The fan should be unplugged before cleaning and servicing.

NOTE TO PARENTS

The transformer and toy should be examined periodically for conditions like frayed or loose wires, metal touching metal, dirty electrical contacts, careless or sloppy wiring such as damage to the output cord, housing or other parts that may result in fire, electric shock or injury. In the event of such conditions, the transformer should not be used until properly repaired. Read all instructions carefully before you begin to play. Remember this table is designed to be played by adults and/or children under adult supervision.

LIMITED 90 DAY WARRANTY

This Halex product is warranted to be free from defects in workmanship or materials at the time of purchase for a period of 90 (ninety) days. Certain restrictions apply (see below).

Should any evidence of defects appear within the limited warranty period after the date of purchase, Regent Sports will either send replacement parts or advise of another course of action. A list of replaceable parts can be found on the parts order form page of this manual. Parts not listed on this order form are not replaceable. **Table tops, playing surfaces, and main frames are not replaceable.** This warranty covers normal consumer use and does not cover failures, which result from alterations, accidents, misuse, abuse, or neglect.

For prompt warranty service and special offers, please register your Halex product at our customer service center by visiting our website at: www.regent-halex.com. Enter the following unique registration number followed by the item number of your table found on the cover of this manual: 1ZAK7 _____. You can also register your product on our automated voice recognition system at the toll free number below. You must register your product within 30 days of purchase to be eligible for warranty service. Please make sure to visit our website to order additional parts not covered under the warranty, as well as on-line instruction manuals and new product information. You may also order parts by calling our automated voice recognition system.

A purchase receipt or other proof of date of purchase will be required before warranty service is performed. Requests for warranty service can be provided by e-mailing the customer service department at cstables@regent-halex.com or by calling customer service at:

877-516-9707 (Toll Free)

10:00 AM to 6:00 PM, EST. (Dec. through Jan.)

10:00 AM to 5:00 PM, EST. (Feb. through Nov.)

Or send request in writing to:

Regent Sports Corporation
45 Ranick Road
Hauppauge, NY 11788
Attn: Halex Customer Service



This warranty gives you specific legal rights and you may have other rights that vary from state to state.

CAUTION: Adult assembly required.

Power Glide Hockey

Rules of Play

The Object of the Game

The object of Power Glide Hockey is to be the first player to score 10 goals against the opposing player.

Beginning the Game

A coin toss is used to determine which player starts with the puck ("serve"). The player winning the coin toss gets the puck and begins play by striking the puck with his/her pusher onto the opponent's side.

During Play

Players can strike the puck anywhere on their half of the playing surface. Players cannot cross the centerline to strike the puck. If a goal is scored when a player strikes the puck over the centerline, it does not count.

A player may stand anywhere around the table on his/her side of the centerline. Players may not stand past that line.

When the puck contacts any part of the centerline, either player may strike the puck to score.

Scoring

A goal is scored when the puck enters and drops inside the opponent's goal.

The player scored upon receives possession of the puck for the next serve.

What Counts as a Goal?

If the puck stops in the goal and has tilted into the goal drop, it counts as a goal.

If the puck stops in the goal and has not tilted into the goal, it does not count as a goal. Player can move the puck out of the goal area with his/her hand or pusher.






 







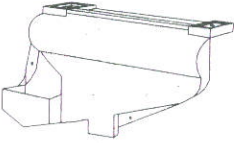
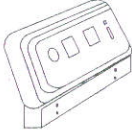

If the puck rebounds out of the goal, the point does not count.

Winning

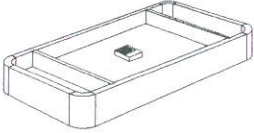
The first player to score 10 points is declared the winner.

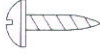

Parts List For 50160
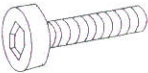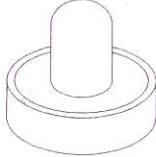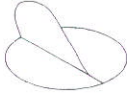
| | | | |
|---|--|---|---|
| <p>#1</p>  <p>Main Frame 1 piece</p> | <p>#2</p>  <p>Left Leg 2 pieces</p> | <p>#3</p>  <p>Right Leg 2 pieces</p> | <p>#4</p>  <p>Leg end panel 2 pieces</p> |
| <p>#5</p>  <p>Leg Washer 8 pieces</p> | <p>#6</p>  <p>3.5 mm Round head screw 8 pieces</p> | <p>#7</p>  <p>3.5mm Washer head screw 12 pieces</p> | <p>#8</p>  <p>3.5mm Flat head screw 4 pieces</p> |
| <p>#9</p>  <p>Allen tool 1 piece</p> | <p>#10</p>  <p>Leg Bolt 8 pieces</p> | <p>#11</p>  <p>Pusher 2 pieces</p> | <p>#12</p>  <p>Pusher felt sticker 2 pieces</p> |
| <p>#13</p>  <p>Red puck 4pieces</p> | <p>#14</p>  <p>Goals 2 pieces</p> | <p>#15</p>  <p>Electronic scorer 1 piece</p> | <p>#16</p>  <p>NHL Sticker Sheet 1 set</p> |


Step 1 – With the help of another adult, carefully place the Mainframe (1) face down on a clean, flat surface. Attach the Left Leg (2) and Right Leg (3) to the Mainframe (1) by inserting the Leg Bolts (10) and Leg Washers (5) through the bolt holes in the Mainframe (1) and into the bolt acceptors in the legs. Attach the Leg End Panels (4) to the outside of the legs (2 & 3) by screwing the 4.5mm Round Head Screws (7) through the Leg Panel (4) and into the pre-drilled holes in the legs.

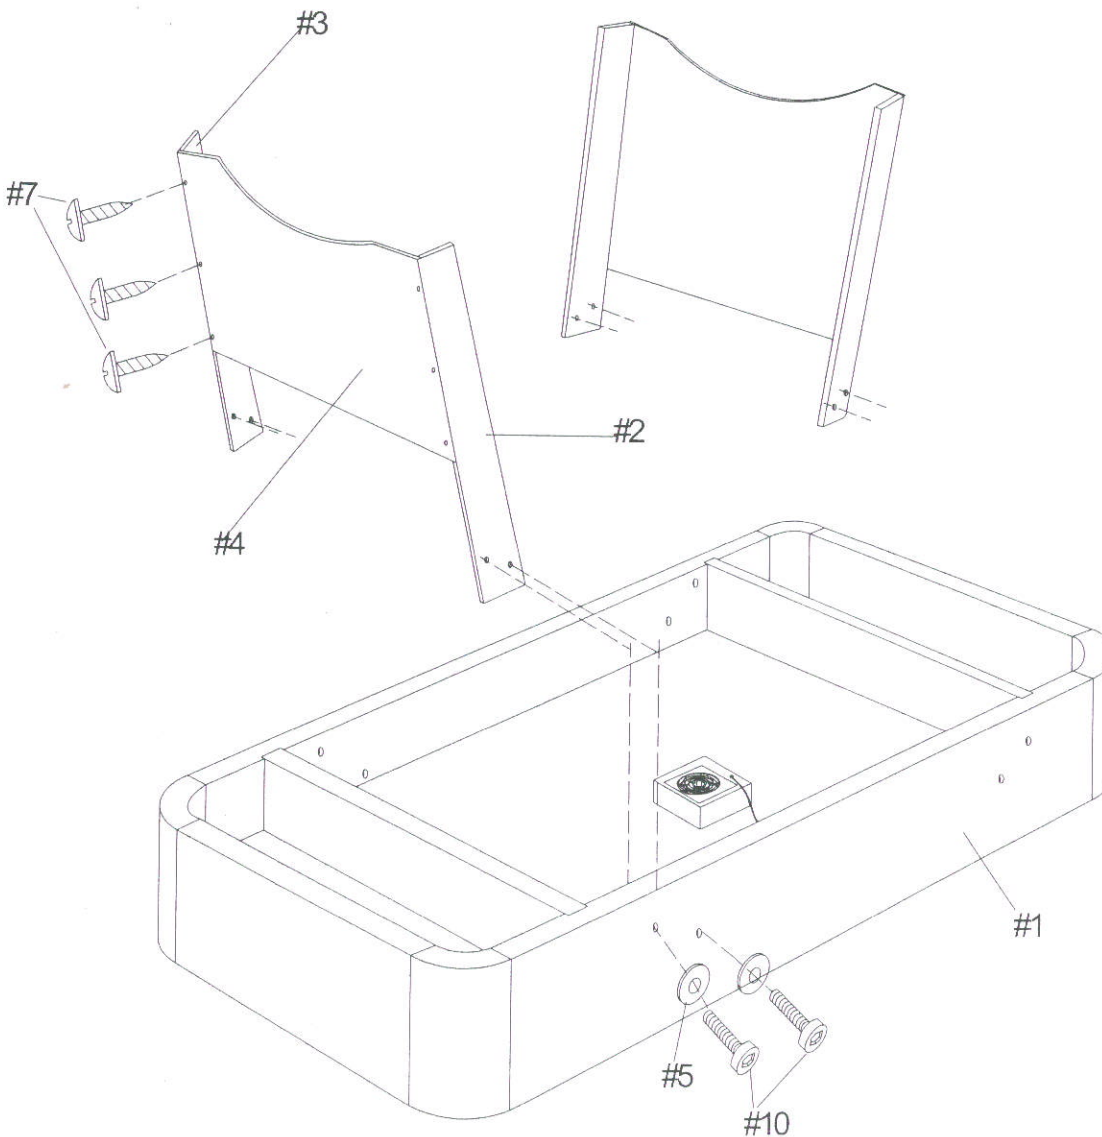

Step 2- With the help of another adult, carefully flip the table over.

Attach the Electronic Scorer (15) to the side of the Mainframe (1) with pre-drilled holes near the top rail using the 3.5mm Flat Head Screws (8). Connect the wires to the electronic scoreboard by plugging them into their holes in the back of the scorer. Place the goal sensor into its place in the backside of the goal, with the tab pointing in, as shown in the diagram.

Secure the Goals (14) to the ends of the main frame by screwing the 3.5mm Round Head Screws (6) through the holes in the goals and into the pre-drilled holes in the main frame.

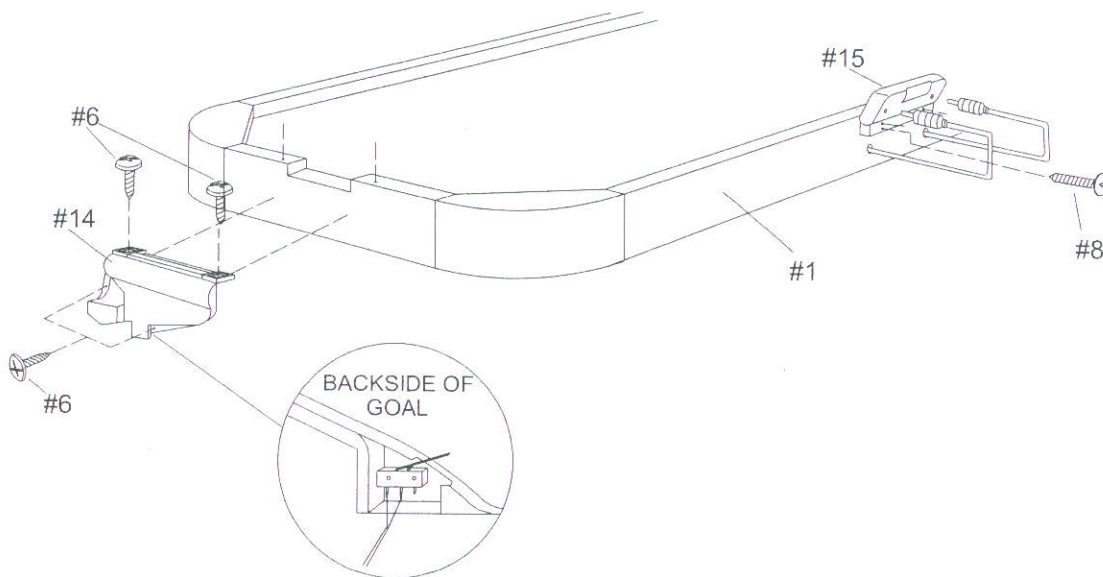

Step 3 -Peel off the pusher Felt Sticker (12) and apply to the Pushers (11).

