


Hedday

TABLE
Games

Assembly instructions

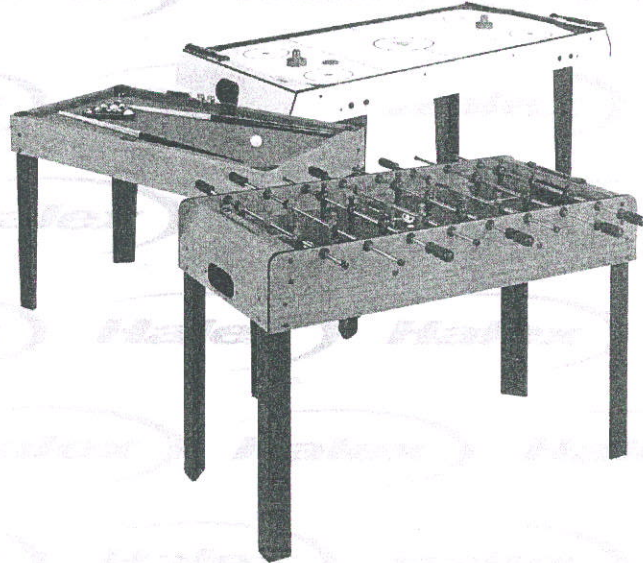

50179MILS



CARE AND USE OF YOUR TABLE

WARNING: To reduce the risk of fire, electric shock or injury to persons, use this unit only in the manner intended by the manufacturer. If you have any question, contact the manufacturer. Before servicing or cleaning the unit, switch the power off and unplug the adapter from the wall outlet.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.

1. Use spray furniture polish to clean all exterior surfaces of your game table.
2. Use only a suitable 120v AC household outlet.
3. This product is intended for INDOOR use only.
4. DO NOT sit, climb or lean on the table.
5. DO NOT drag the table when moving it. This will damage the leg.
6. The fan should be unplugged before cleaning and servicing.

LIMITED 90 DAY WARRANTY

This Halex product is warranted to be free from defects in workmanship or materials at the time of purchase for a period of 90 (ninety) days. Certain restrictions apply (see below).

Should any evidence of defects appear within the limited warranty period after the date of purchase, Regent Sports will either send replacement parts or advise of another course of action. A list of replaceable parts can be found on the parts order form page of this manual. Parts not listed on this order form are not replaceable. **Table tops, playing surfaces, and main frames are not replaceable.** This warranty covers normal consumer use and does not cover failures, which result from alterations, accidents, misuse, abuse, or neglect.

For prompt warranty service and special offers, please register your Halex product at our customer service center by visiting our website at: www.regent-halex.com. Enter the following unique registration number followed by the item number of your table found on the cover of this manual: 1ZAK7 _____. You must register your product within 30 days of purchase to be eligible for warranty service. Please make sure to visit our website to order additional parts not covered under the warranty, as well as on-line instruction manuals and new product information. You may also order parts by calling our automated voice recognition system at: 877-516-9707 (Toll Free).

A purchase receipt or other proof of date of purchase will be required before warranty service is performed. Requests for warranty service can be provided by e-mailing the customer service department at cstables@regent-halex.com or by calling customer service at:

877-516-9707 (Toll Free)

10:00 AM to 6:00 PM, EST. (Dec. through Jan.)












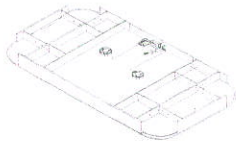








 


10:00 AM to 5:00 PM, EST. (Feb. through Nov.)

Or send request in writing to:


Regent Sports Corporation
45 Ranick Road
Hauppauge, NY 11788
Attn: Halex Customer Service

This warranty gives you specific legal rights and you may have other rights that vary from state to state.


Parts List for 50179mills

<p>#1</p>  <p>Main Frame 1 piece</p>	<p>#2</p>  <p>NHL Sticker Sheet 1 set</p>	<p>#3</p>  <p>Leg 4 pieces</p>	<p>#4</p>  <p>End Leg Panel 2 pieces</p>
<p>#5</p>  <p>Side Leg Panel 2 pieces</p>	<p>#6</p>  <p>End Apron 2 pieces</p>	<p>#7</p>  <p>Side Apron 2 pieces</p>	<p>#8</p>  <p>Puck Return Tray With Screw 2 pieces</p>
<p>#9</p>  <p>Pusher Felt Sticker 4 pieces</p>	<p>#10</p>  <p>Deluxe Power Pusher (red) 4 pieces</p>	<p>#11</p>  <p>Red Puck 4 pieces</p>	<p>#12</p>  <p>Leg Washer 28 pieces</p>
<p>#13</p>  <p>Metal Plate 16 pieces</p>	<p>#14</p>  <p>Apron Corner 4 pieces</p>	<p>#15</p>  <p>3.5mm X 14mm Round Head Screw 32 pieces</p>	<p>#16</p>  <p>3.5mm X 12mm Round Head Screw 72 pieces</p>
<p>#17</p>  <p>Allen Tool 1 piece</p>	<p>#18</p>  <p>M8 X 30mm Leg Bolt 28 pieces</p>	<p>#19</p>  <p>M6 X 12mm Key Bolt 28 pieces</p>	<p>#20</p>  <p>Leg Cover 4 pieces</p>
<p>#21</p>  <p>Leg Support Base (A) 4 pieces</p>	<p>#22</p>  <p>Leg Support Base (B) 4 pieces</p>	<p>#23</p>  <p>Leg Cover Corner With Plastic 4 pieces</p>	


Step 1- Place Felt Sticker #9 on to the bottom of the Pusher # 10.

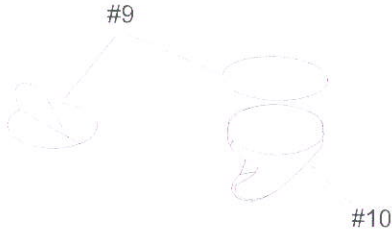


Step 2- Attach Side and End Aprons #6 and #7 to the Main Frame #1 using two Screws #19 on each Hinges.

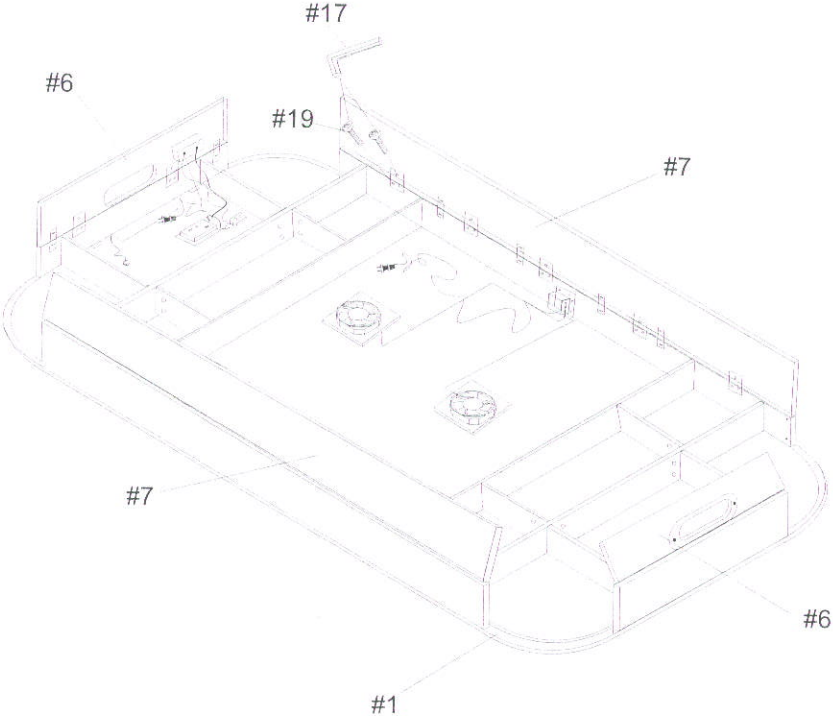


Step 3- Attach Corner Pieces #14 using Screws # 15.
Next, attach Puck Return Tray #8 using Screws #16.

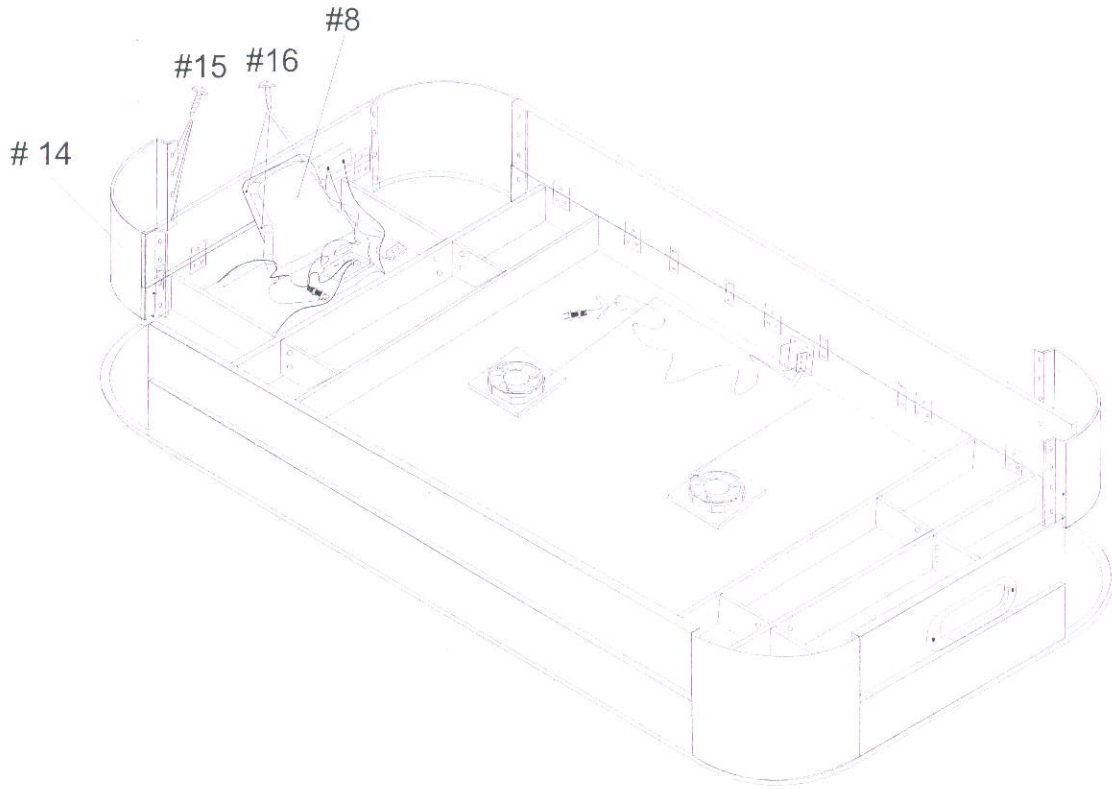


Step 4 - Attach Legs #3 to the Mainframe using Bolts # 18 and Washers #12. Next, slide Leg Support Base #22 over each leg and secure it using Bolt #18 and Washers #12.

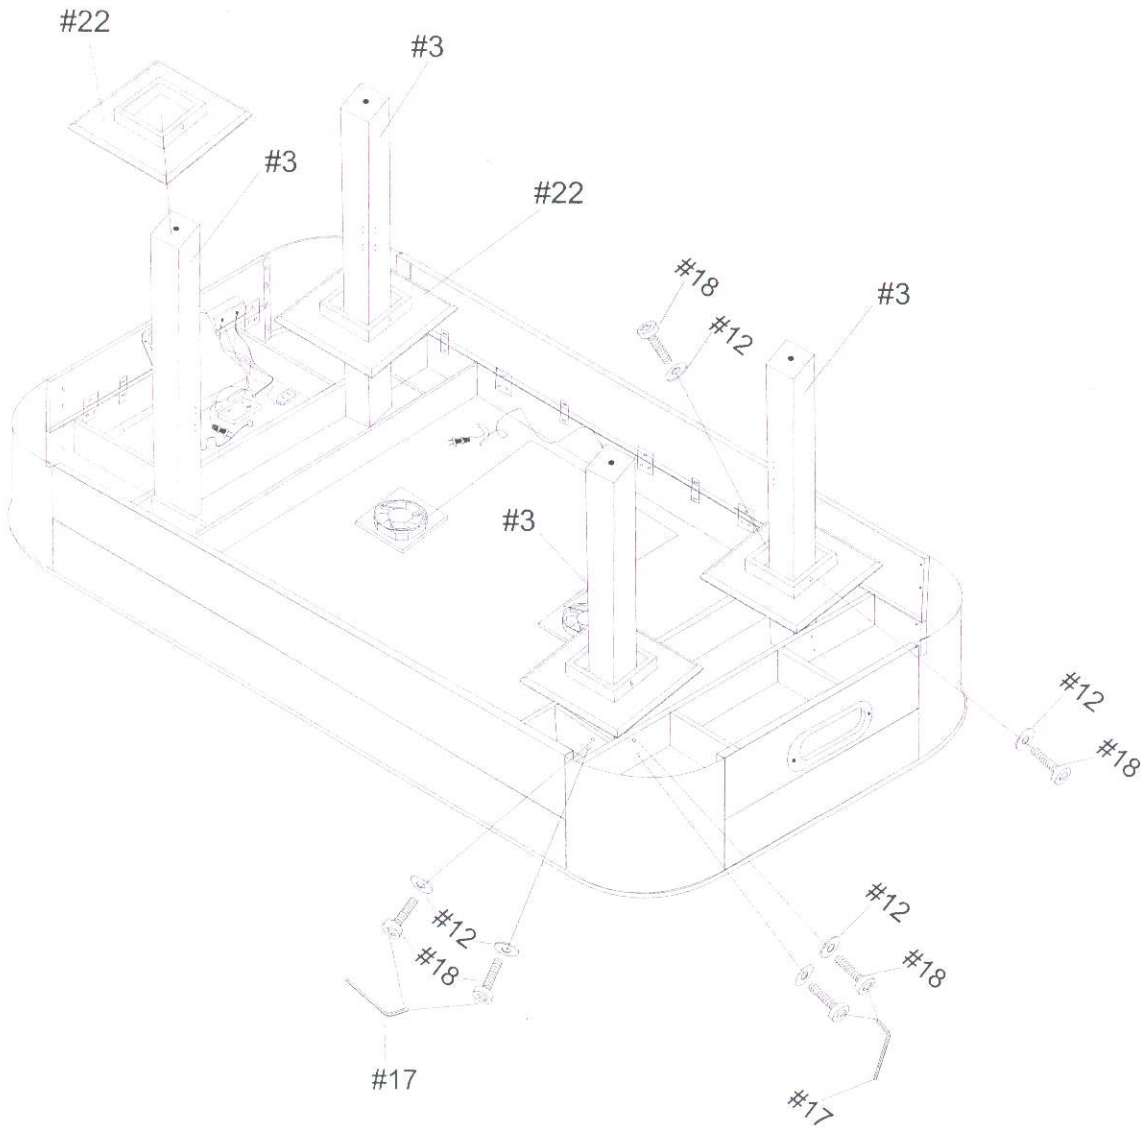

Step 5 - Attach Side Panels # 4 and End Panels # 5 using brackets # 13 and Screws # 16.

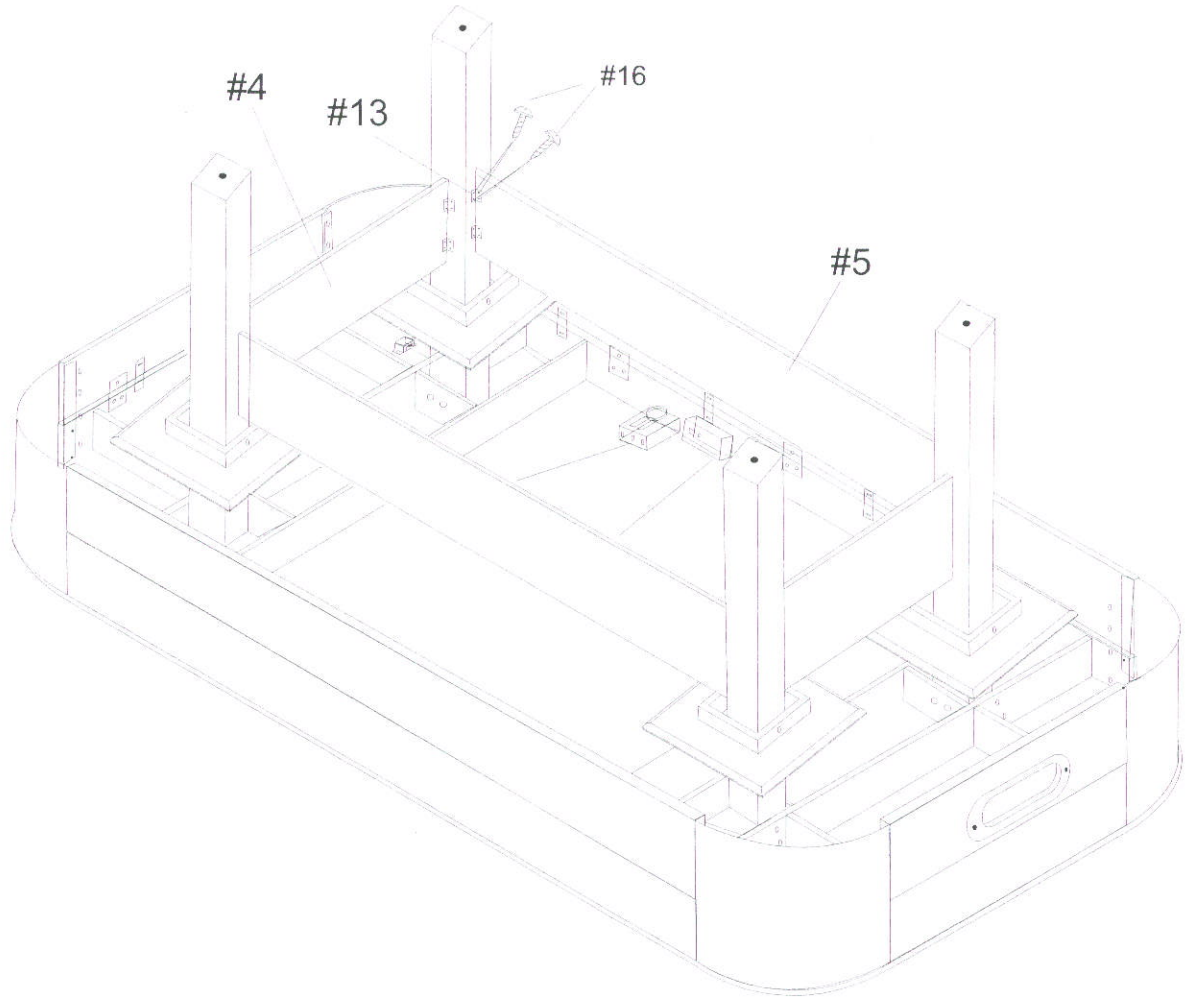

Step 6 - Assemble Legs #20 by folding the legs to form a box and attaching Corner Piece #23

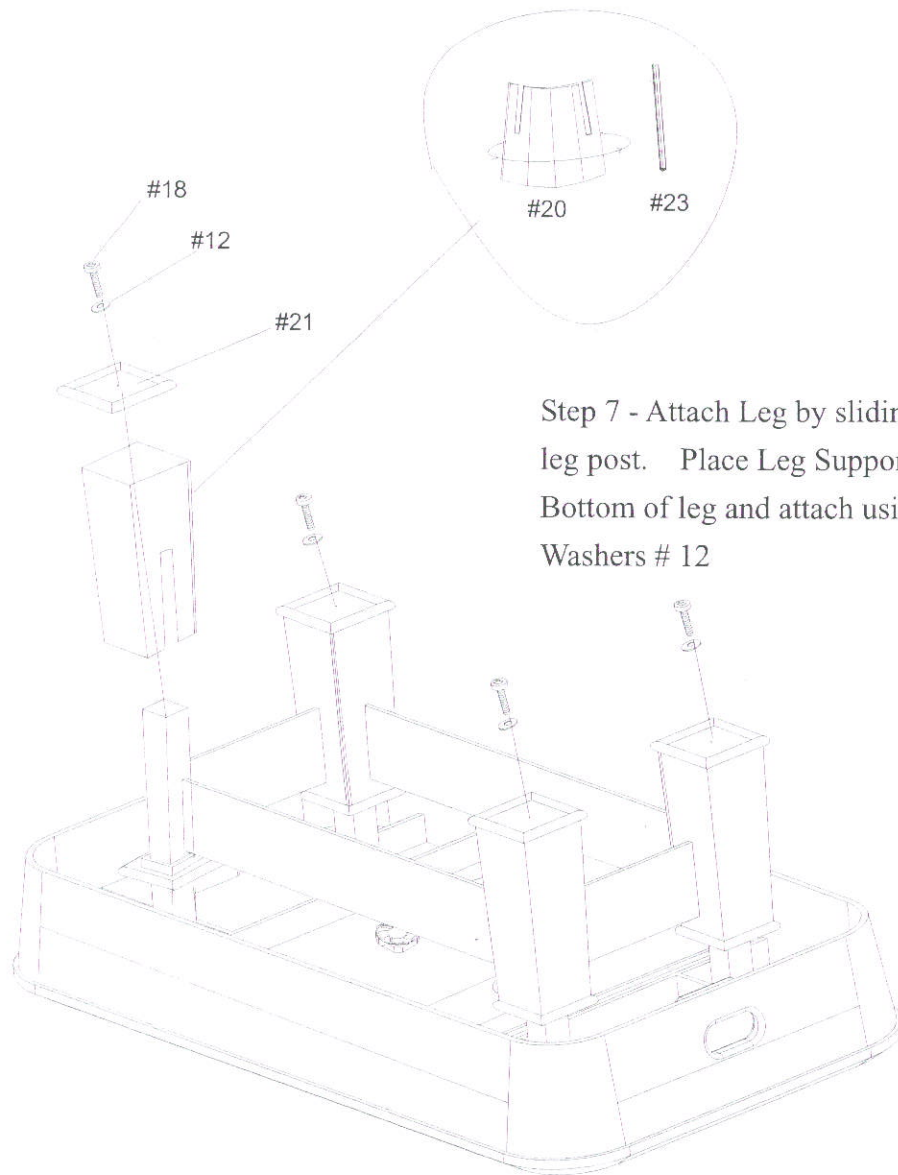

Step 7 - Attach Leg by sliding assembly over leg post. Place Leg Support Base# 21 over Bottom of leg and attach using Bolts # 18 and Washers # 12