


**Games**

**Assembly instructions**

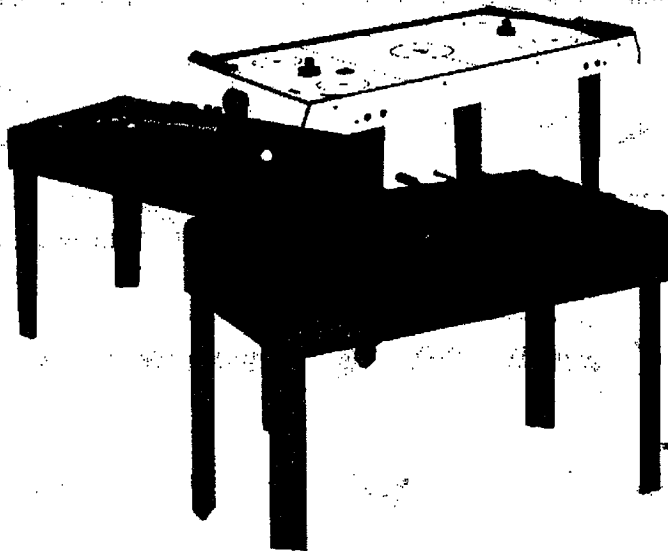

50410 WC  
50410

**Halex**

721

**Require 2 "AAA" Batteries**

## LIMITED 90 DAY WARRANTY

This Halex product is warranted to be free from defects in workmanship or materials at the time of purchase for a period of 90 (ninety) days. Certain restrictions apply (see below).

Should any evidence of defects appear within the limited warranty period after the date of purchase, Regent Sports will either send replacement parts or advise of another course of action. A list of replaceable parts can be found on the parts order form page of this manual. Parts not listed on this order form are not replaceable. **Table tops, playing surfaces, and main frames are not replaceable.** This warranty covers normal consumer use and does not cover failures, which result from alterations, accidents, misuse, abuse, or neglect.

For prompt warranty service and special offers, please register your Halex product at our customer service center by visiting our website at: [www.regent-halex.com](http://www.regent-halex.com). Enter the following unique registration number followed by the item number of your table found on the cover of this manual: 1ZAK7 \_\_\_\_\_. You must register your product within 30 days of purchase to be eligible for warranty service. Please make sure to visit our website to order additional parts not covered under the warranty, as well as on-line instruction manuals and new product information. You may also order parts by calling our automated voice recognition system at: 877-516-9707 (Toll Free).

**A purchase receipt or other proof of date of purchase will be required before warranty service is performed.** Requests for warranty service can be provided by e-mailing the customer service department at [cstables@regent-halex.com](mailto:cstables@regent-halex.com) or by calling customer service at:

**877-516-9707 (Toll Free)**

**10:00 AM to 6:00 PM, EST. (Dec. through Jan.)**

**10:00 AM to 5:00 PM, EST. (Feb. through Nov.)**

Or send request in writing to:

**Regent Sports Corporation**

45 Ranick Road

 



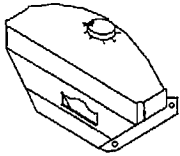



 


 




Hauppauge, NY 11788

Attn: Halex Customer Service

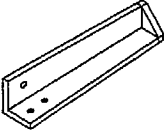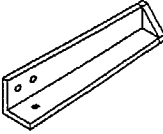

This warranty gives you specific legal rights and you may have other rights that vary from state to state.
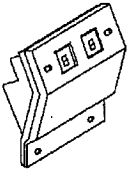
### 50410 Parts Lis


<p>1#</p>  <p>Main frame 1 piece</p>	<p>2#</p>  <p>Left leg 2 pieces</p>	<p>3#</p>  <p>Right leg 2 pieces</p>	<p>4#</p>  <p>Leg panel 2 pieces</p>
<p>5#</p>  <p>Goal 2 pieces</p>	<p>6#</p>  <p>1/4" x 35mm bolt 12 pieces</p>	<p>7#</p>  <p>1/4" washer 24 pieces</p>	<p>8#</p>  <p>1/4" nut 12 pieces</p>
<p>9#</p>  <p>Leg leveler 4 pieces</p>	<p>10#</p>  <p>TA 4 x 12mm screw 16 pieces</p>	<p>11#</p>  <p>TA 3.5 x 15mm screw 2 pieces</p>	<p>12#</p>  <p>Wrench 1 piece</p>
<p>13#</p>  <p>Electronic scores 1 piece</p>	<p>14#</p>  <p>Pusher 2 pieces</p>	<p>15#</p>  <p>Pusher felt sticker 2 pieces</p>	<p>16#</p>  <p>Round puck 2 pieces</p>





## Assembly Instructions for 50410 Hockey Table

- |   |  |      |
|---|--|------|
| ① |  | = 1  |
| ② |  | = 2  |
| ③ |  | = 2  |
| ④ |  | = 2  |
| ⑥ |  | = 12 |
| ⑦ |  | = 24 |
| ⑧ |  | = 12 |
| ⑨ |  | = 4  |
| ⑩ |  | = 8  |

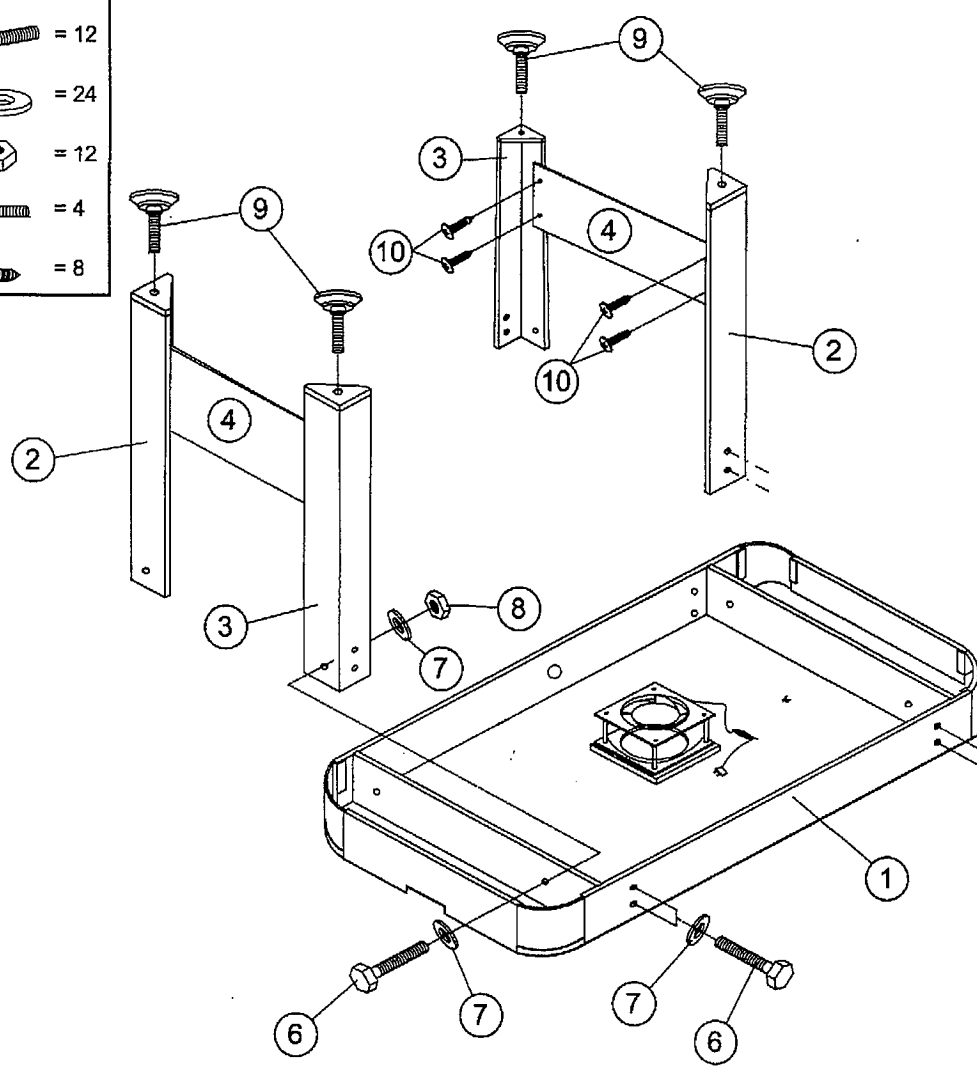**Step1:**


Place the main cabinet face down on a clean, flat surface. Attach the legs (parts #2 and #3) to the cabinet using the 1/4"x 35mm bolts (#6) and 1/4" washers (#7) and 1/4" nut(#8). Secure the leg end panels (#4) to each set of legs using the screws TA4x12mm (#10).Screw the leg levelers (#9) into the bottom of each leg. as shown.





5		= 2
10		= 8
11		= 2
13		= 1

**Step 2:**

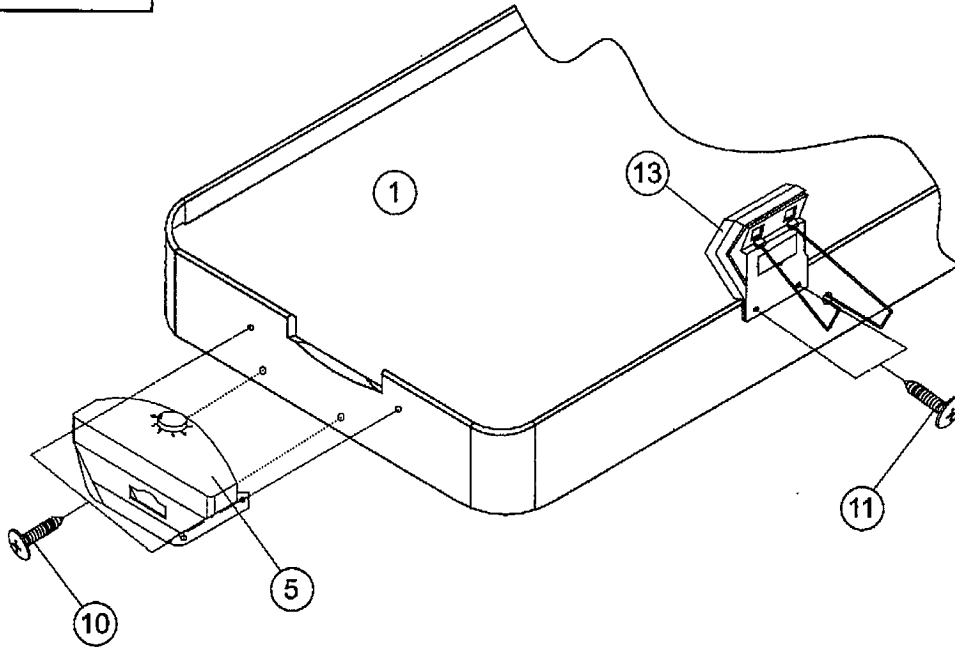
With the help of another adult, carefully flip the table over. Attach the goals (#5) to each end of the table using the TA4x12mm screws (#10). Affix the electronic scorer (#13) to the main frame in the pre-drilled holes using the TA3.5x15mm screws (#11). Extend the wires found under the main frame to the electronic scorer (#13) and connect them in the appropriate acceptors as shown.



14		= 2
15		= 2

**Step 3:**

Peel off the backing on the pusher felt stickers (#15) and adhere to the pushers (#14).

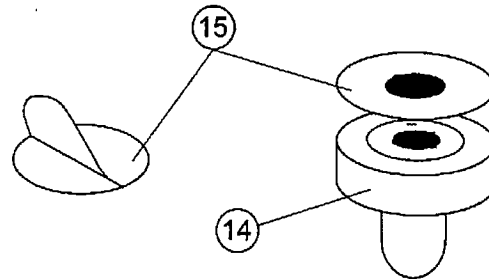

# **Power Glide Hockey**

## **Rules of Play**

### **The Object of the Game**

The object of Power Glide Hockey is to be the first player to score 10 goals against the opposing player.

### **Beginning the Game**

A coin toss is used to determine which player starts with the puck ("serve"). The player winning the coin toss gets the puck and begins play by striking the puck with his/her pusher onto the opponent's side.

### **During Play**

Players can strike the puck anywhere on their half of the playing surface. Players cannot cross the centerline to strike the puck. If a goal is scored when a player strikes the puck over the centerline, it does not count.

A player may stand anywhere around the table on his/her side of the centerline. Players may not stand past that line.

When the puck contacts any part of the centerline, either player may strike the puck to score.

### **Scoring**

A goal is scored when the puck enters and drops inside the opponent's goal.

The player scored upon receives possession of the puck for the next serve.

### **What Counts as a Goal?**

If the puck stops in the goal and has tilted into the goal drop, it counts as a goal.

If the puck stops in the goal and has not tilted into the goal, it does not count as a goal. Player can move the puck out of the goal area with his/her hand or pusher.

If the puck rebounds out of the goal, the point does not count.

### **Winning**

The first player to score 10 points is declared the winner.



## CARE AND USE OF YOUR TABLE

**WARNING:** To reduce the risk of fire, electric shock or injury to persons, use this unit only in the manner intended by the manufacturer. If you have any question, contact the manufacturer. Before servicing or cleaning the unit, switch the power off and unplug the adapter from the wall outlet.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.

1. Use spray furniture polish to clean all exterior surfaces of your game table.
2. Use only a suitable 120v AC household outlet.
3. This product is intended for INDOOR use only.
4. **DO NOT** sit, climb or lean on the table.
5. **DO NOT** drag the table when moving it. This will damage the leg.
6. The fan should be unplugged before cleaning and servicing.

## PARTS ORDER FORM

If for some reason you are missing any assembly parts for your Halex game table, please call the Regent Sports Customer Service line at (1-877) 516-9707 (toll free) between the hours of 10:00am and 5:00 pm EST or go online at [www.regent-halex.com](http://www.regent-halex.com) for parts ordering. Please refer to the REGENT SPORTS LIMITED WARRANTY concerning missing and defective parts.

Parts also may be ordered by filling out the form below. Please fill in all the information and return to:

REGENT SPORTS CORP.  
45 RANICK ROAD  
HAUPPAUGE, NEW YORK, 11788  
ATTN: CUSTOMER SERVICE

REGENT SPORTS CORP. requires that all orders for replacement parts must be paid by check, money order, VISA, or MC. Cash is not accepted. Please make all checks or money orders payable to REGENT SPORTS CORP. Please note all prices include shipping and handling.

Name of Purchaser: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_

State: \_\_\_\_\_ Zip Code: \_\_\_\_\_

Phone: \_\_\_\_\_

Part #	Description	Quantity	Price	Total Cost
197-50410-02	Left Leg	2	\$12.50 each	
197-50410-03	Right Leg	2	\$12.50 each	
197-50410-04	Leg Panel	2	\$10.00 each	
197-50410-05	Goal	2	\$5.00 each	
197-50410-06	1/4" x 35mm bolt	12	\$1.00 each	
197-50410-07	1/4" Washer	24	\$1.00 each	
197-50410-08	1/4" Nut	12	\$1.00 each	
197-50410-09	Leg Leveler	4	\$5.00 each	
197-50410-10	Screw TA 4 x 12mm	16	\$1.00 each	
197-50410-11	Screw TA 3.5 x 15mm	2	\$1.00 each	
197-50410-12	Wrench	1	\$2.00 each	
197-50410-13	Electronic Scorer	1	\$10.00 each	
197-50410-14	Pusher	2	\$4.00 each	
197-50410-15	Pusher Felt Sticker	2	\$2.00 each	
197-50410-16	Round puck	2	\$2.00 each	

Also be sure to check out our web site at:

**[www.regent-halex.com](http://www.regent-halex.com)**

• Parts Ordering • Owners Manual • Product Information



© 2006  
Regent Sports Corporation  
Hauppauge, New York