


TABLE
Games

Assembly instructions

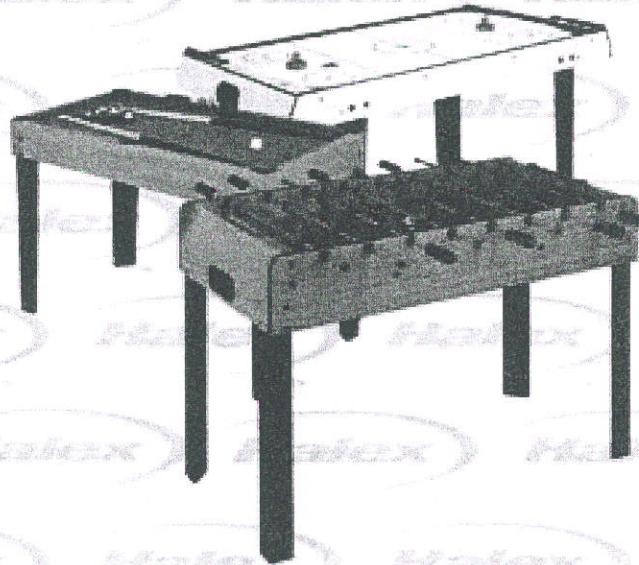

50512

Halex

TM

LIMITED 90 DAY WARRANTY

This Halex product is warranted to be free from defects in workmanship or materials at the time of purchase for a period of 90 (ninety) days. Certain restrictions apply (see below).

Should any evidence of defects appear within the limited warranty period after the date of purchase, Regent Sports will either send replacement parts or advise of another course of action. A list of replaceable parts can be found on the parts order form page of this manual. Parts not listed on this order form are not replaceable. **Table tops, playing surfaces, and main frames are not replaceable.** This warranty covers normal consumer use and does not cover failures, which result from alterations, accidents, misuse, abuse, or neglect.

For prompt warranty service and special offers, please register your Halex product at our customer service center by visiting our website at: www.regent-halex.com. Enter the following unique registration number followed by the item number of your table found on the cover of this manual: 1ZAK7 _____. You must register your product within 30 days of purchase to be eligible for warranty service. Please make sure to visit our website to order additional parts not covered under the warranty, as well as on-line instruction manuals and new product information. You may also order parts by calling our automated voice recognition system at: 877-516-9707 (Toll Free).

A purchase receipt or other proof of date of purchase will be required before warranty service is performed. Requests for warranty service can be provided by e-mailing the customer service department at cstables@regent-halex.com or by calling customer service at:

877-516-9707 (Toll Free)

10:00 AM to 6:00 PM, EST. (Dec. through Jan.)

10:00 AM to 5:00 PM, EST. (Feb. through Nov.)

Or send request in writing to:

Regent Sports Corporation
45 Ranick Road
Hauppauge, NY 11788
Attn: Halex Customer Service

This warranty gives you specific legal rights and you may have other rights that vary from state to state.

Foosball Table Game Rules

To Start a Match:

- A coin flip shall precede the start of the match. The team that wins the flip has the choice of table side or first serve.

The Serve:

- A serve through the serving hole is used to put the ball into play at the start of the match, after a point is scored, or after a ball leaves the table.

Subsequent Serves:

- Following the first serve of the match, subsequent serves shall be made by the team last scored upon.

Ball in Play:

- Once a ball is put in play by the server, it shall remain in play until the ball is hit off the table, a dead ball is declared, time out is called, or a point is scored.

Ball Off the Table:

- The ball should be put back into play with a serve by the team which originally served that ball.

Dead Ball:

- A ball shall be declared dead when it has completely stopped its motion and is not within reach of any player figure.
- If the ball is declared dead between the goalie and the 2-man rods, it shall be put back into play by placing the ball in the corner nearest the spot of the dead ball.
- If the ball is declared dead anywhere else on the table, it shall be put back into play with a serve by the team that originally served that ball.

Point Scored:

- A ball entering the goal shall count as a point, as long as it was legally scored. A ball which enters the goal but returns to the playing surface and/or leaves the table still counts as a goal.

Change of Positions:

- In any doubles event, each player may play only the two rods normally designated for his position. Once the ball is put into play, the players must play the same position until a point is scored.

Spinning the Rods:

- Spinning the rods is illegal. Spinning is defined as the rotation of any soccer figure more than 360 degrees before or after striking the ball.
- If the ball goes in the goal, then it will not be counted as a point and will be put back into play by the goalie as if the ball had been declared a dead ball between the goal and the nearest two-man rod.




 
 





 

 
 
 

Jarring:

- Any jarring, sliding, or lifting of the table shall be illegal.



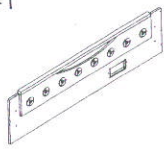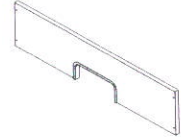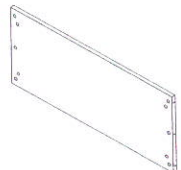




 








Reaching Into The Playing Area:

- It is illegal for a player to reach into the playing area while the ball is in play.


Parts List for 50512

<p>#1</p>  <p>Side Panel 2 pieces</p>	<p>#2</p>  <p>Goal End Board 2 pieces</p>	<p>#3</p>  <p>End Panel 2 pieces</p>	<p>#4</p>  <p>Right Leg 2 pieces</p>
<p>#5</p>  <p>Left Leg 2 pieces</p>	<p>#6</p>  <p>Playfield 1 piece</p>	<p>#7</p>  <p>Top Rail Board 2 pieces</p>	<p>#8</p>  <p>Playfield Support Brace 2 pieces</p>
<p>#9</p>  <p>Leg Leveler 4 pieces</p>	<p>#10</p>  <p>Rod End Cap 8 Pieces</p>	<p>#11</p>  <p>Goal Box 2 Pieces</p>	<p>#12</p>  <p>Ball Runner 2 Pieces</p>
<p>#13</p>  <p>Ball Catcher 2 Pieces</p>	<p>#14</p>  <p>M8X30MM Bolt 16 pieces</p>	<p>#15</p>  <p>22MM Washer 16 pieces</p>	<p>#16</p>  <p>3.5X12MM Washer Head Screw 60 pieces</p>

 
Parts List for 50512

<p>#17</p>  <p>3 Player Black 2 pieces</p>	<p>#18</p>  <p>2 Player Black 1 piece</p>	<p>#19</p>  <p>5 Player Black 1 piece</p>	<p>#20</p>  <p>Cup Holder 2 pieces</p>
<p>#21</p>  <p>3 Player Silver 2 pieces</p>	<p>#22</p>  <p>2 Player Silver 1 piece</p>	<p>#23</p>  <p>5 Player Silver 1 piece</p>	<p>#24</p>  <p>Bracket 12 pieces</p>
<p>#25</p>  <p>Soccer Ball 4 pieces</p>	<p>#26</p>  <p>Scorer Black 1 piece</p>	<p>#27</p>  <p>Hand Grip 8 pieces</p>	<p>#28</p>  <p>Cross Bar 2 pieces</p>
<p>#29</p>  <p>3.5X12MM Flat Head Screw 4 pieces</p>	<p>#30</p>  <p>4X45MM Washer Head Screw 40 pieces</p>	<p>#31</p>  <p>Allen Key 1 piece</p>	<p>#32</p>  <p>Scorer Silver 1 piece</p>


Step1-Place Side Panel #1 upside down on a clean dry surface. Slide player through the holes in the side panel following the order in the below diagram.

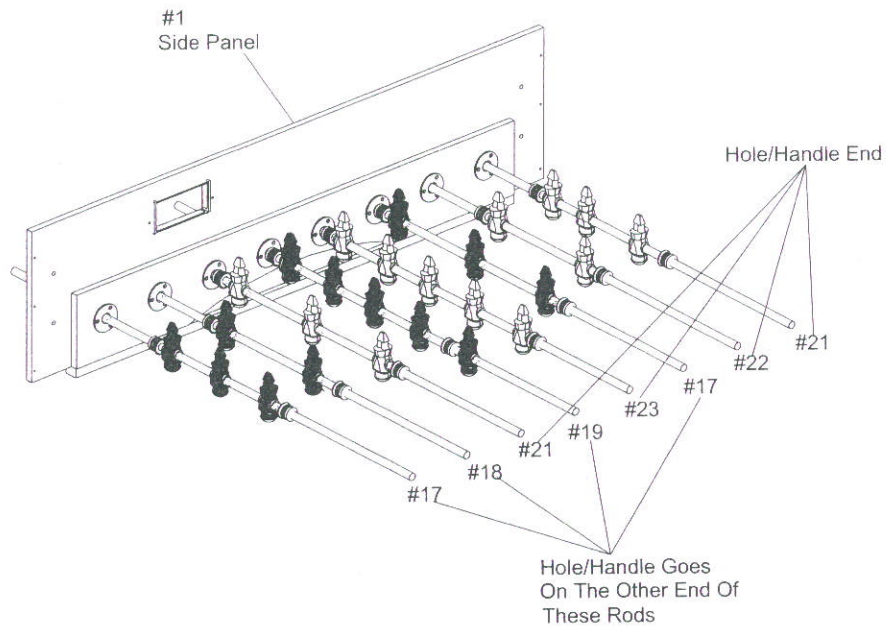


Step 2 – Assemble end sections.
Attach goal end board #2 to top rail board #7 using brackets #24 and screws #16. Repeat this process for second side.

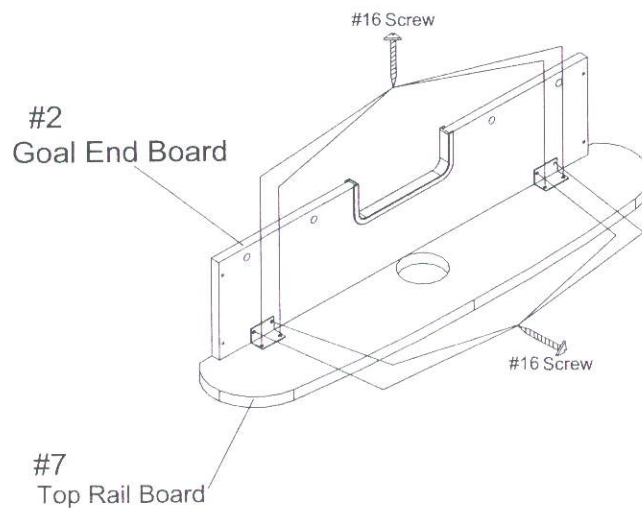


Step 3- Assemble side and end panels. First attach both end panels to the first side panel using screws #30. Next slide side panel #2 over the other ends of the rods. Attach to the end panel using screws #30.

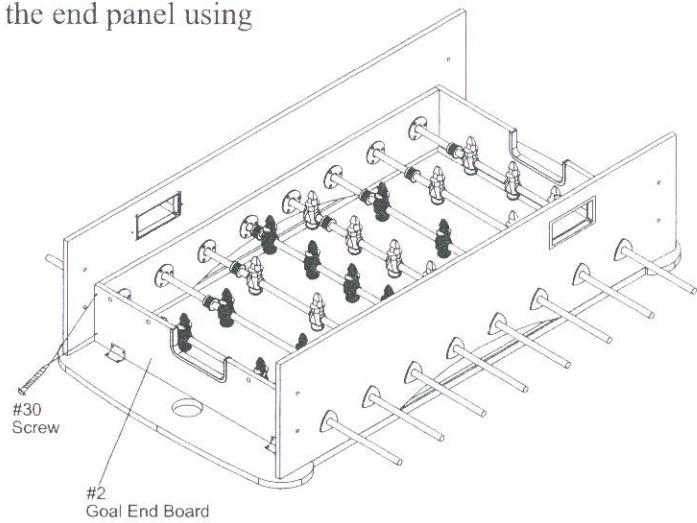

Step 4- Attach playfield #6 to the assembly using screws #30.

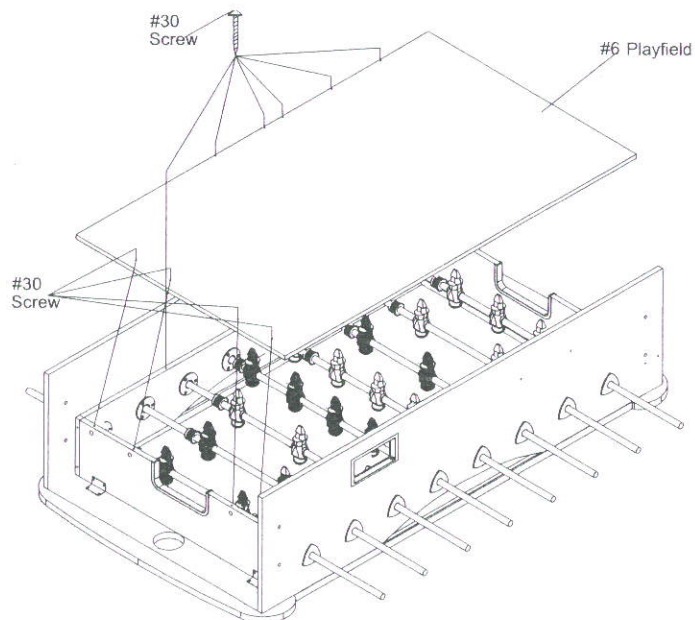

Step 5- Attach brackets #24 to the top of end panel #3 using screws #16. Follow diagram for proper placement. Next attach goal box #11 to end panel #3 also using screws #16.

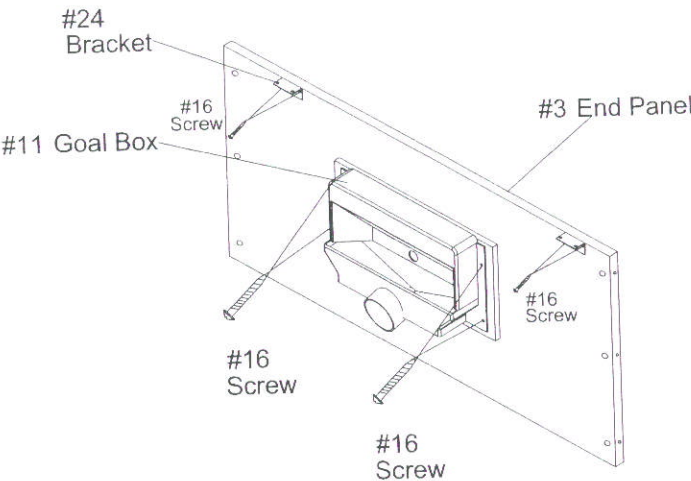

Step 6- Attach both end panels #3 to the main frame of the cabinet using screws #16 and screws #30.

