

CARE AND USE OF YOUR TABLE

Halex Halex Halex Ha

lex Halex Halex Halex

TABLE

Games

Assembly instructions

lex Halex Halex Halex

Halex Halex Halex Ha

lex Halex Halex Halex

Halex Halex Halex Ha

lex Halex Halex Halex

Halex Halex Halex Ha

lex Halex Halex Halex

lex Halex Halex Halex




63522

CARE AND USE OF YOUR TABLE

WARNING: To reduce the risk of fire, electric shock or injury to persons, use this unit only in the manner intended by the manufacturer. If you have any question, contact the manufacturer. Before servicing or cleaning the unit, switch the power off and unplug the adapter from the wall outlet.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician **DO NOT** attempt to defeat this safety feature.

1. Use spray furniture polish to clean all exterior surfaces of your game table.
2. Use only a suitable 120v AC household outlet
3. This product is intended for INDOOR use only.
4. **DO NOT** sit, climb or lean on the table.
5. **DO NOT** drag the table when moving it. This will damage the leg
6. The fan should be unplugged before cleaning and servicing.

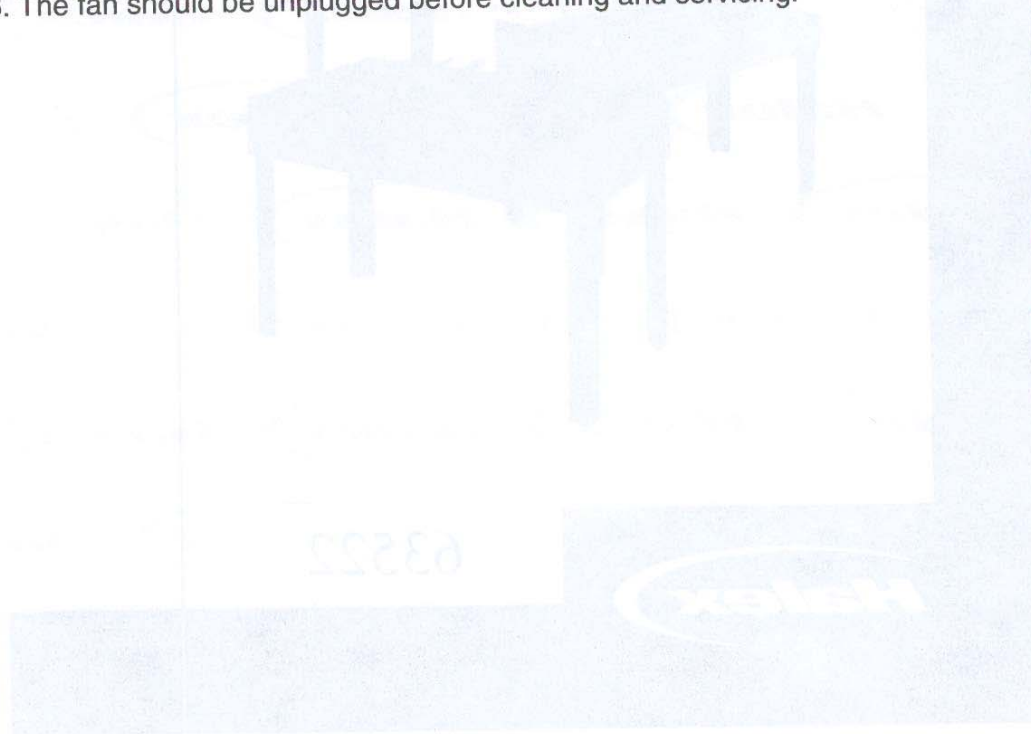

LIMITED 90 DAY WARRANTY

This Halex product is warranted to be free from defects in workmanship or materials at the time of purchase for a period of 90 (ninety) days. Certain restrictions apply (see below).

Should any evidence of defects appear within the limited warranty period after the date of purchase, Regent Sports will either send replacement parts or advise of another course of action. A list of replaceable parts can be found on the parts order form page of this manual. Parts not listed on this order form are not replaceable. **Table tops, playing surfaces, and main frames are not replaceable.** This warranty covers normal consumer use and does not cover failures, which result from alterations, accidents, misuse, abuse, or neglect.

For prompt warranty service and special offers, please register your Halex product at our customer service center by visiting our website at: www.regent-halex.com. Enter the following unique registration number followed by the item number of your table found on the cover of this manual: 1ZAK7 _____. You must register your product within 30 days of purchase to be eligible for warranty service. Please make sure to visit our website to order additional parts not covered under the warranty, as well as on-line instruction manuals and new product information. You may also order parts by calling our automated voice recognition system at: 877-516-9707 (Toll Free).

A purchase receipt or other proof of date of purchase will be required before warranty service is performed. Requests for warranty service can be provided by e-mailing the customer service department at cstables@regent-halex.com or by calling customer service at:

877-516-9707 (Toll Free)

10:00 AM to 6:00 PM, EST. (Dec. through Jan.)






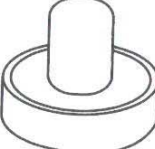
 



 

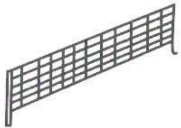





 
 

 
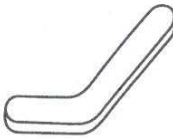
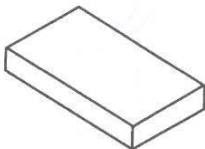
10:00 AM to 5:00 PM, EST. (Feb. through Nov.)



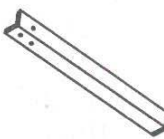
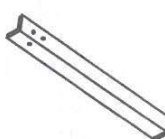


Or send request in writing to:

Regent Sports Corporation
45 Ranick Road
Hauppauge, NY 11788
Attn: Halex Customer Service

This warranty gives you specific legal rights and you may have other rights that vary from state to state.

  PARTS LIST FOR DEFENDER 10IN 1 63522 GAME TABLE


<p>#1</p>  <p>Leg bolt 12Pieces</p>	<p>#2</p>  <p>Leg washer 24Pieces</p>	<p>#3</p>  <p>Left Leg 2Pieces</p>	<p>#4</p>  <p>Right Leg 2Pieces</p>
<p>#5</p>  <p>Main frame 1Piece</p>	<p>#6</p>  <p>Pusher 2Pieces</p>	<p>#7</p>  <p>Puck 2Pieces</p>	<p>#8</p>  <p>Pusher Felt sticker 2Pieces</p>
<p>#9</p>  <p>Goal 2Pieces</p>	<p>#10</p>  <p>Phillips Head Screw 8Pieces</p>	<p>#11</p>  <p>Table Tennis Top 1Piece</p>	<p>#12</p>  <p>Table Tennis Paddle 2Pieces</p>
<p>#13</p>  <p>Table Tennis Net 1Piece</p>	<p>#14</p>  <p>Table Tennis Ball 2Pieces</p>	<p>#15</p>  <p>Bowling Pin 1Set</p>	<p>#16</p>  <p>Bowling ball 1Piece</p>
<p>#17</p>  <p>Chess set 1Set</p>	<p>#18</p>  <p>Checkers 1Set</p>	<p>#19</p>  <p>Dice 1Set</p>	<p>#20</p>  <p>Dice cup 1Piece</p>
<p>#21</p>  <p>Shuffleboard puck 1Set</p>	<p>#22</p>  <p>Game Board 1Piece</p>	<p>#23</p>  <p>Hockey stick 2Pieces</p>	<p>#24</p>  <p>Playing Cards 1Piece</p>

<p>#25</p>  <p>1/2" Phillips Head Screw 1 Piece</p>	<p>#26</p>  <p>Accessory bag hook 1 Piece</p>	<p>#27</p>  <p>Accessory bag 1 Piece</p>	<p>#28</p>  <p>Leg nut 12 Pieces</p>
<p>#29</p>  <p>Wrench 1 Piece</p>	<p>#30</p>  <p>Allen key tool 1 Piece</p>		

Assembly Instructions For Defender 10 in 1 Game Table


Step 1

Place the main frame (#5) face down on a flat, clean surface. Attach the legs (#3) and (#4) to the main frame using leg bolt (#1), leg washer (#2) and leg nut (#28) as shown in the diagram. Screw the accessory bag hook (#26) to an inside edge of the main frame using the screws (#25)

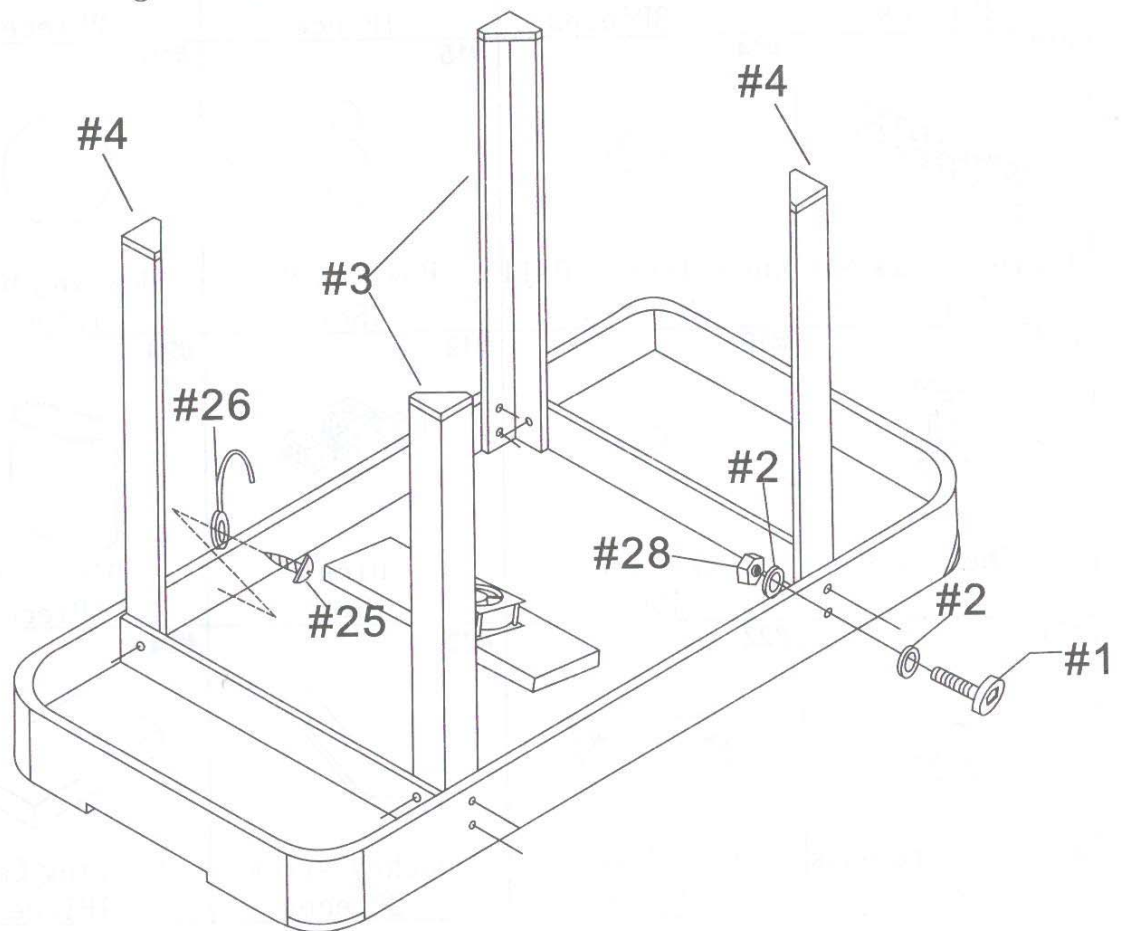


Step 2

Attach the goals (#9) to the end of the top rail of the main frame using the Phillips head screws (#10) as shown.

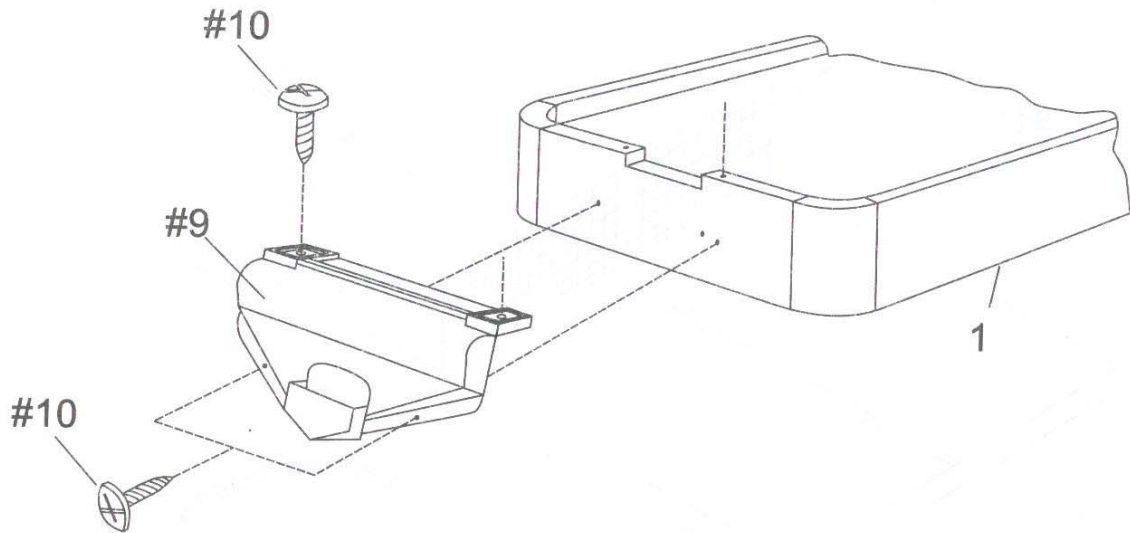


Step 3

Peel off the Pusher felt stickers (#8) and apply to the Pushers (#6)

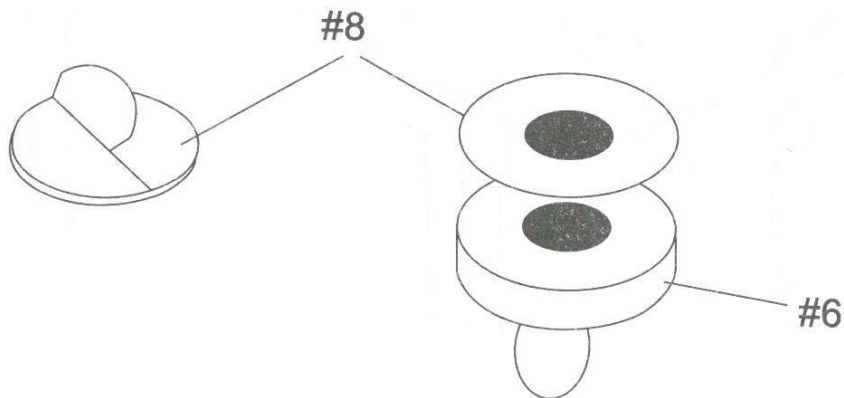

Step 4

To play table tennis, place the table tennis top over the hockey surface as shown.

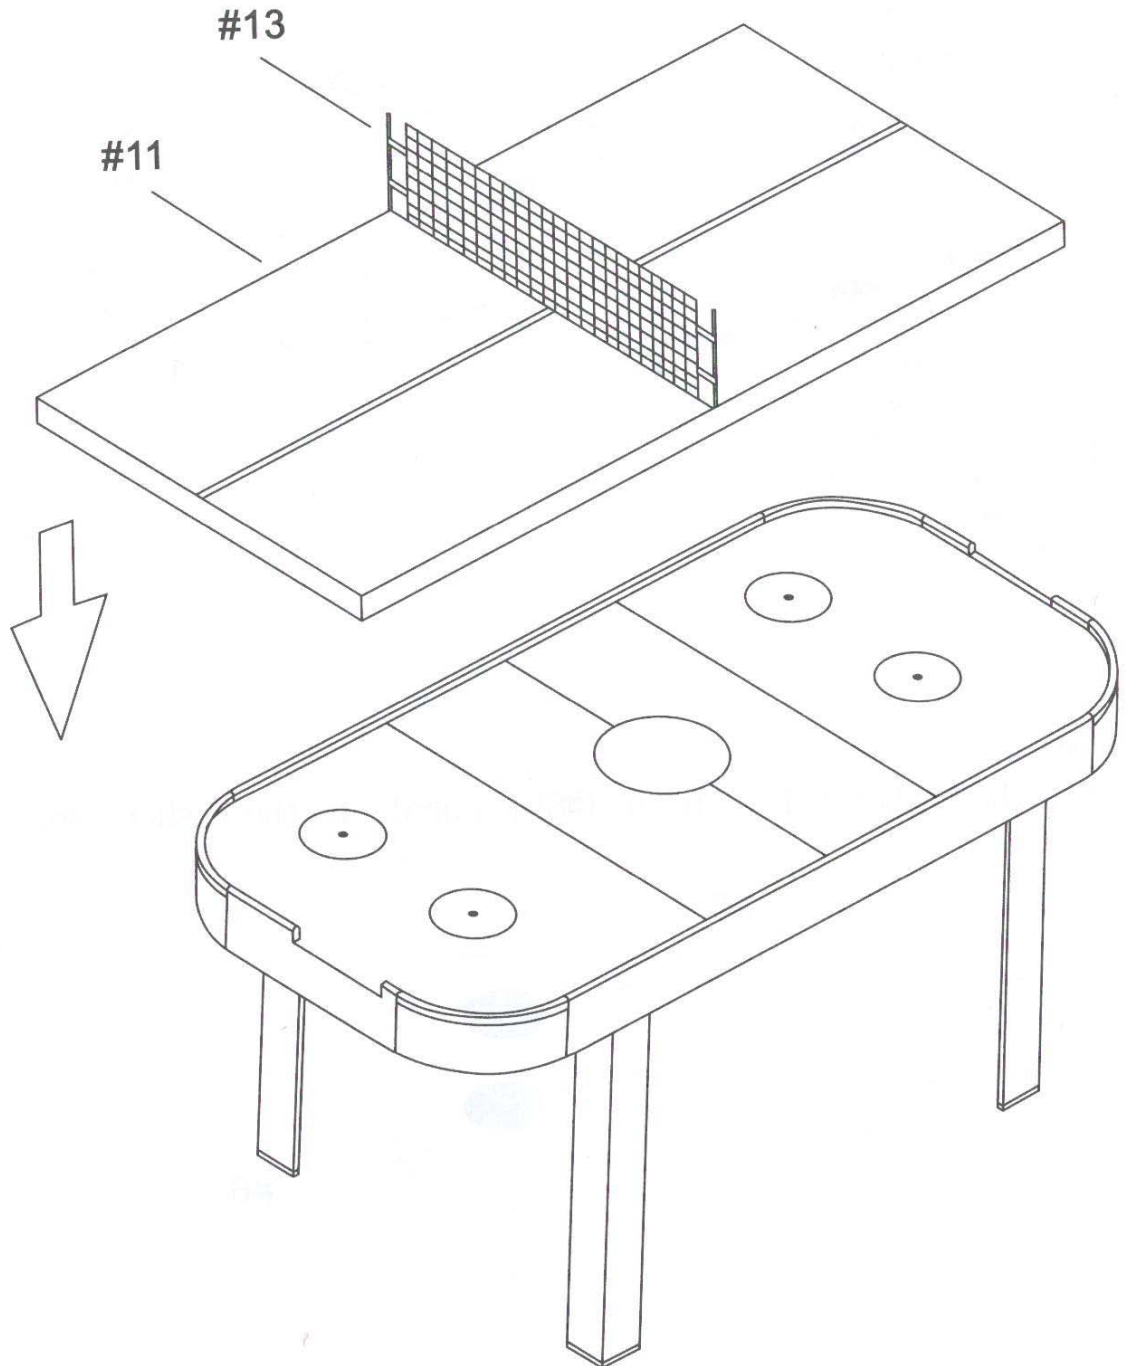

63522

PARTS ORDER FORM

Part #	Description	Quantity	Price	Total Cost
193-63522-1	Leg Bolt	12	\$1.00 EA	
193-63522-2	Leg Washer	24	\$1.00 EA	
193-63522-3	Left Leg	2	\$17.50 EA	
193-63522-4	Right Leg	2	\$17.50 EA	
030-01001M	Pusher	2	\$5.00 EA	
030-01002M	Puck	2	\$2.00 EA	
030-01003M	Pusher felt sticker	2	\$2.00 EA	
030-01005SM	Goal	2	\$7.50 EA	
193-63522-10	Phillips Head Screw	8	\$1.00 EA	
300-10024	Table Tennis Top	1	\$12.00 EA	
300-10022	Table Tennis Paddle	2	\$5.00 EA	
300-10020	Table Tennis Net	1	\$5.00 EA	
300-10023	Table Tennis Ball	1	\$2.00 EA	
300-10014	Bowling pin	2	\$2.00 EA	
300-10015	Bowling ball	1 Set	\$3.00 EA	
300-10032	Chess Set	1	\$5.00 EA	
300-10033	Checkers	1 Set	\$2.00 EA	
300-10034	Dice	1 Set	\$2.00 EA	
300-10019	Dice Cup	1 Set	\$3.00 EA	
300-10016	Shuffleboard puck	1	\$2.00 EA	
300-10010	Game Board	1	\$10.00 EA	
300-10011	Hockey stick	2	\$5.00 EA	
300-10038	Playing Cards	1	\$5.00 EA	
193-63522-25	½" Phillips Head Screw	1	\$1.00 EA	
300-10030	Accessory bag hook	1	\$2.00 EA	
300-10018	Accessory bag	1	\$4.00 EA	
193-63522-28	Leg Nut	12	\$1.00 EA	

Power Glide Hockey

Rules of Play

The Object of the Game

The object of Power Glide Hockey is to be the first player to score 10 goals against the opposing player.

Beginning the Game

A coin toss is used to determine which player starts with the puck ("serve"). The player winning the coin toss gets the puck and begins play by striking the puck with his/her pusher onto the opponent's side.

During Play

Players can strike the puck anywhere on their half of the playing surface. Players cannot cross the centerline to strike the puck. If a goal is scored when a player strikes the puck over the centerline, it does not count.

A player may stand anywhere around the table on his/her side of the centerline. Players may not stand past that line.

When the puck contacts any part of the centerline, either player may strike the puck to score.

Scoring

A goal is scored when the puck enters and drops inside the opponent's goal.

The player scored upon receives possession of the puck for the next serve.

What Counts as a Goal?

If the puck stops in the goal and has tilted into the goal drop, it counts as a goal.

If the puck stops in the goal and has not tilted into the goal, it does not count as a goal. Player can move the puck out of the goal area with his/her hand or pusher.

If the puck rebounds out of the goal, the point does not count.

Winning

The first player to score 10 points is declared the winner.



Also be sure to check out our web site at:

www.regent-halex.com

• Parts Ordering • Owners Manual • Product Information



© 2004

Regent Sports Corporation
Hauppauge, New York